


# HTC Desire 510


## Inserting your micro SIM and storage cards

### IMPORTANT:

Do not cut a regular SIM and insert it into the micro SIM slot, since the card may get stuck in the slot. If you're using a nano SIM card with a card adapter, never insert the adapter when it's empty. This may damage the card slot.

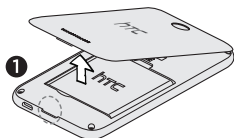


1. With the phone facing down, open the back cover from the small opening at the bottom.

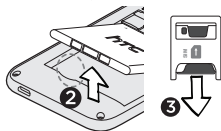


2. Remove the battery.

3. Remove the placeholder card from the SIM slot.

**Note:** Make sure NOT to use the placeholder card as a nano SIM card adapter.

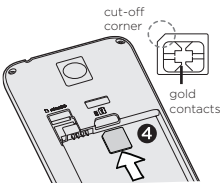


4. With your micro SIM card's gold contacts facing down and cut-off corner facing in, insert the micro SIM into the SIM slot and push it into place.

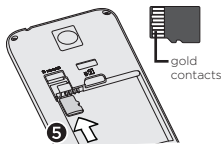

5. With your microSD™ card's gold contacts facing down, insert the microSD card into the storage card slot and push it into place.



6. Reinsert the battery.

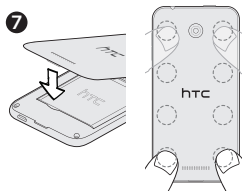

7. To replace the back cover, align the phone onto the top part of the back cover first. Then press the sides and the bottom part of the back cover down to lock the cover into place.

## Want some guidance on using your phone?

On your phone, check out our friendly walkthroughs in the **Tips & Help** app. For self-help in troubleshooting basic problems, you can use the **HTC Guide** app. Or go to [www.htc.com/support/](http://www.htc.com/support/) to find tutorials, the user guide, FAQs, latest news, and more.

Please also read the Safety and regulatory guide that's included in the box.

© 2014 HTC Corporation. All rights reserved.

HTC, the HTC logo, and HTC Desire are trademarks of HTC Corporation.

microSD is a trademark of SD-3C LLC.

All other company, product and service names mentioned herein are trademarks, registered trademarks or service marks of their respective owners.

htc.com



91H0xxxx-xxM Rev.A